



Sony Vaio VPCW21FX Screen Replacement

This guide will illustrate how to replace the screen on the Sony Vaio VPCW21FX.

Written By: Summer



INTRODUCTION

Does your screen have cracks, pixelation, or is completely black? This step by step guide is here to help you replace it.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-



Step 1 — Screen



⚠ Make sure your device is powered off and unplugged to avoid electric shock.

- Open your laptop.
- Remove the four screws on the frame.

Step 2

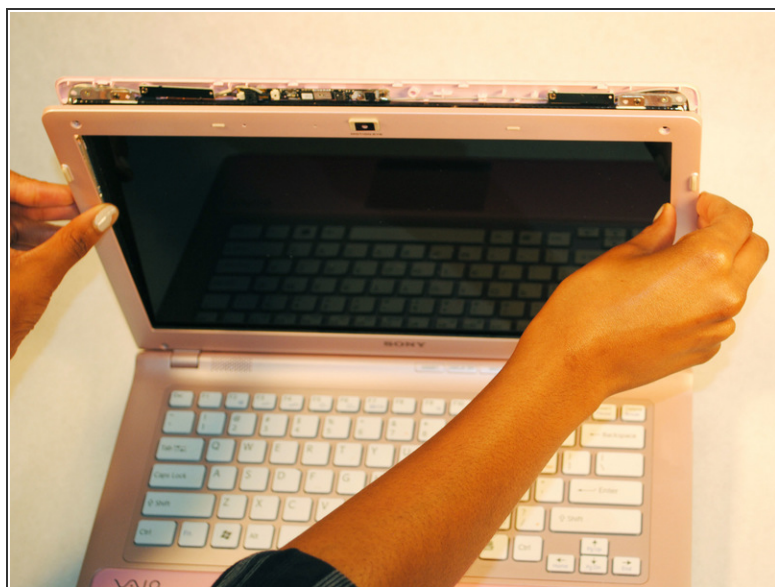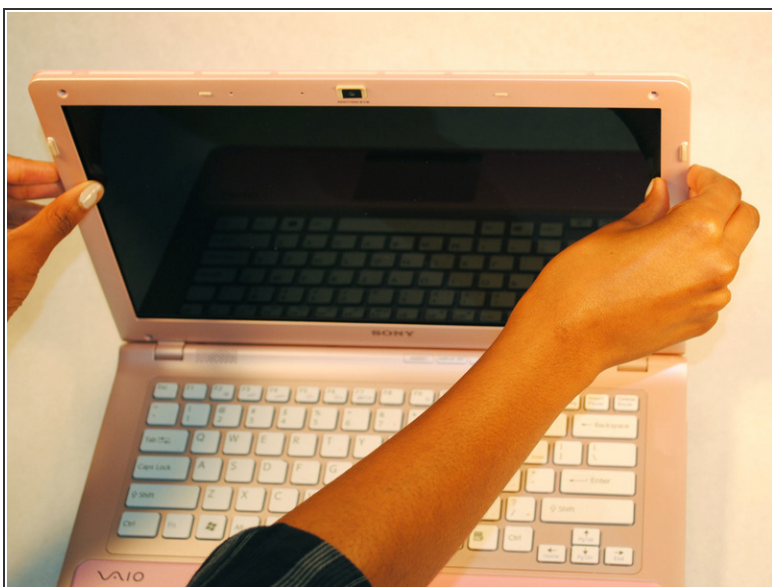

- After all of the screws are removed, gently pull on the frame to remove it.

Step 3




- Unscrew the 4 screws located on the screen itself.

Step 4



- Gently lay the screen down on the keyboard.

Step 5

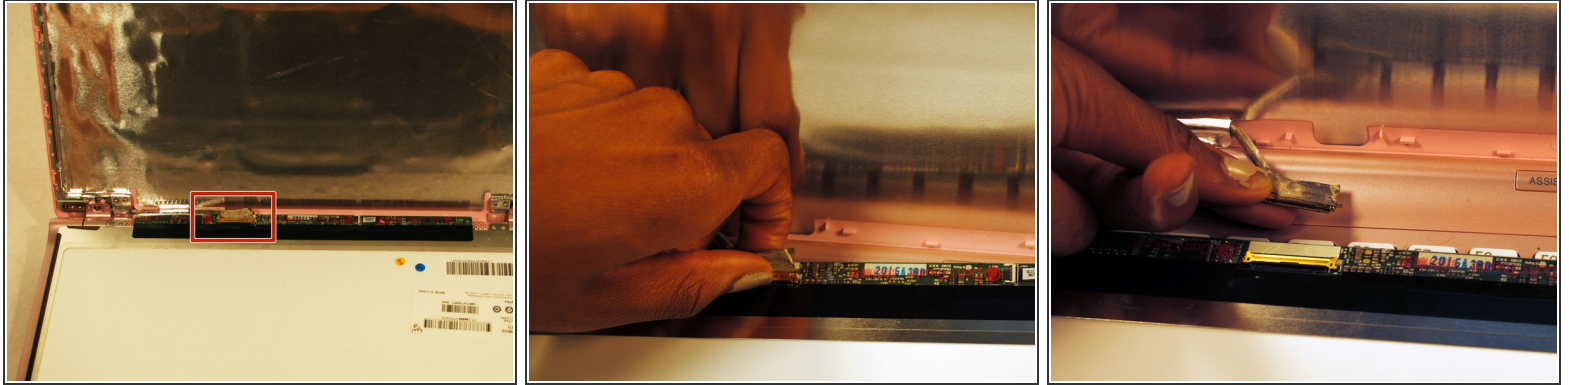

- Detach the wire that is connected to the LCD screen by grabbing back of connector and sliding it out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 05:19:22 AM.